


Building ruin

- 1) Dle obrázku slepte hlavní díly diorama.
- 2) Jednotlivé díly diorama je vhodné lepit disperzním lepidlem Hercules, Disperkol ...
- 3) Spáry vytmelte řídkou sádkou a zahladte vlhkým prstem.
- 4) Vrata můžete nalepit celá anebo zezadu předřít a rozlomit na dvě poloviny a ty pak nalepit zvlášť.
- 5) Z příložených latěk můžete vyrobit části rámu oken.
- 6) Před natíráním je vhodné diorama přetřít lakem. Snížíte tím savost podkladu a spotřebu barvy.

- 1) Cement the main parts together according to the picture.
- 2) A dispersion (white) glue is recommended.
- 3) Fill gaps with thin plaster and smooth with wet finger.
- 4) Cement the gate in whole or break them into two parts in a line stencilled from the back side.
- 5) Use wooden beams included in the set for parts of window frames.
- 6) It is suitable to overspray the ruin with a clear lacquer before painting - it helps you to spare color otherwise absorbed by the porous material.

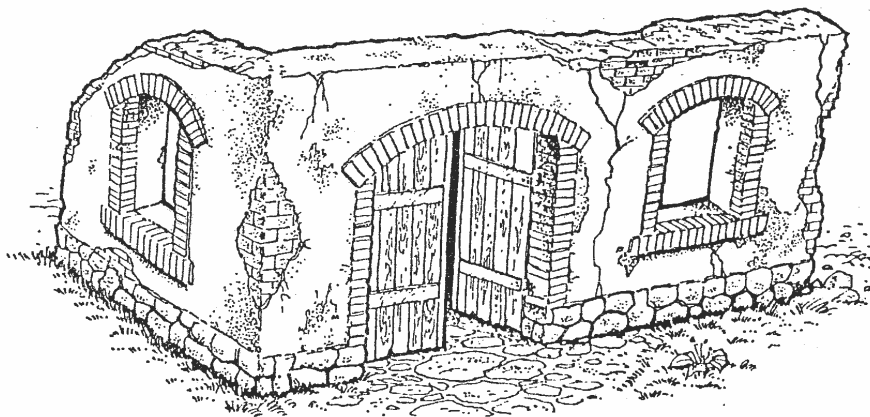

Plus Model s.r.o
Jižní 56, 370 10 České Budějovice
Czech Republic
<http://www.plusmodel.cz>
e-mail: plusmodel@plusmodel.cz

**Kupujte přímo na www.plusmodel.cz
Buy directly from www.plusmodel.cz**